

# INSTRUCTION SHEET

## Joining Hardware Kit for Avante™ Series


You've made a great choice in adding an Avante™ Series multi-stream setup to your site. Following the instructions below will help receptacles perform at their best and look great as long as you own them.



### JOINING HARDWARE KIT






#### SUPPLIED PARTS:

- a. 6 – 1/4" Washers
- b. 3 – 1/4" Clevis Pin
- c. 3 – Hairpin Cotter Pins

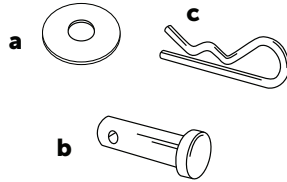

#### TOOLS REQUIRED:

- Power drill
- 1/4" or 9/32" drill bit

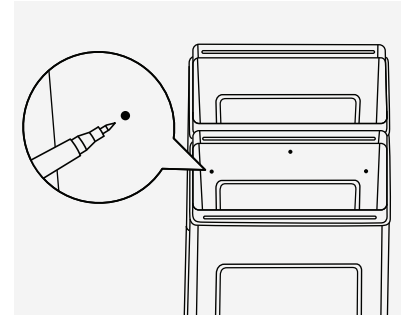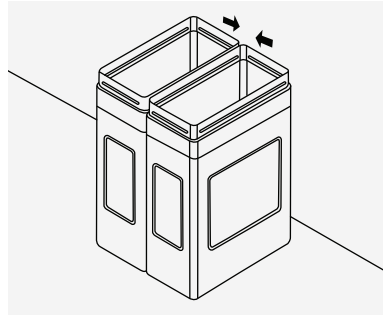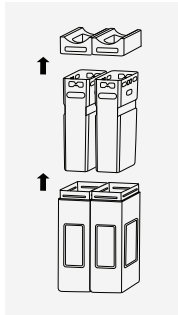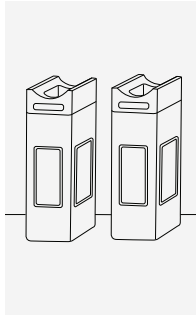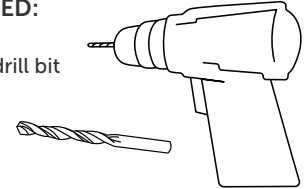

#### 1. Prepare receptacles


Determine the order you would like your receptacles to be joined. Remove lids and liners from each receptacle.

#### 2. Push the two receptacles together

Align the front and back faces of each receptacle.


#### 3. Mark joining holes

Using a sharpie that will show up on black plastic, mark 3 locations in a triangular pattern on the inside of the receptacle. The top mark will be centered 2" below the inner lip of the receptacle. The right and left mark should be 6" lower than the top mark, and if attaching the long faces, 20" apart. If attaching the short faces, they should be 8.5" apart.

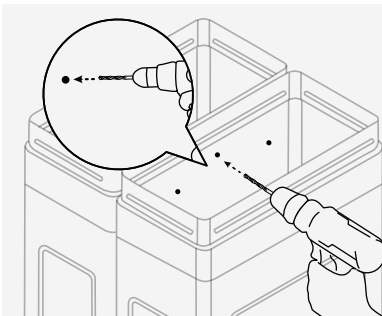


#### 4. Drill joining holes

Use a 1/4" or 9/32" drill bit to drill through both receptacles at the top marked location. Wait to drill the other two marks until completing step 6 and 7.

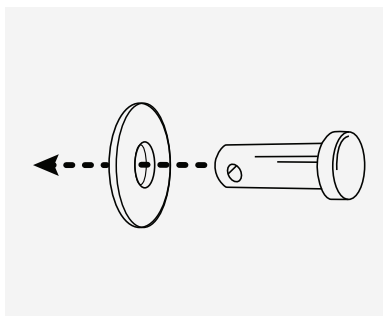

#### 5. Prepare hardware

Slide one washer onto one of the three supplied clevis pins.

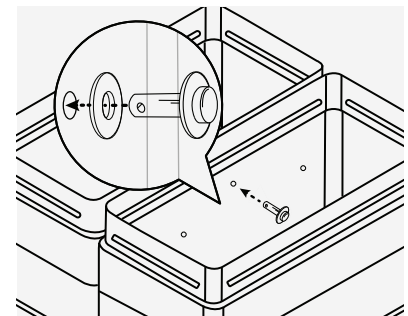

#### 6. Join receptacles together

From the inside of the right receptacle, push the clevis pin and washer from step 5 through both receptacles. Slide an additional washer over the exposed end of the clevis pin in the left receptacle.


# INSTRUCTION SHEET

## Joining Hardware Kit for Avante™ Series




You've made a great choice in adding an Avante™ Series multi-stream setup to your site. Following the instructions below will help receptacles perform at their best and look great as long as you own them.

### JOINING HARDWARE KIT

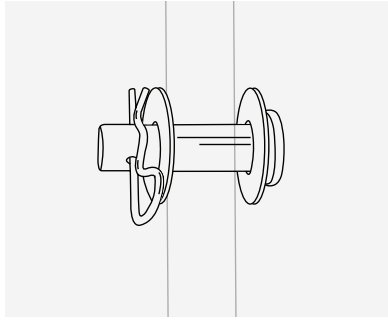


#### 7. Install remaining hardware

Next, install the provided hairpin cotter pin into the end of the clevis pin. Repeat steps 4-7 for each of the remaining two marked locations on the receptacle.

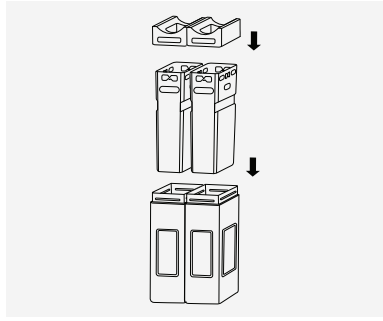

#### 8. Replace lids & liners

Once all hardware has been secured, place liners with trash bags inserted into the receptacles and place lid.

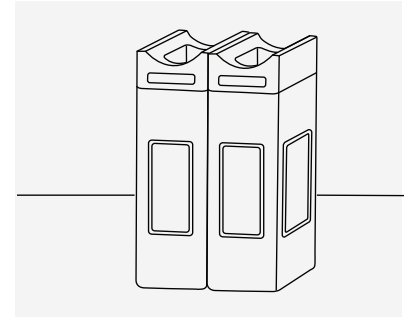

#### 9. Ready to use

Place receptacles in desired location.